



# Viewer's Guide and Review

Accompanies: **Linking headsets to a wireless base station** Video release: **6/25/2012** Version: **1.0**

Firecom's One-Minute Maintenance videos are designed to answer the most common questions regarding the operation of your team communication system. For additional information, consult your operations manual, visit [www.firecom.com](http://www.firecom.com), or call us at 800-527-0555.




- 1 On the front panel of the base station, locate the black Pairing button, the green LED Power light, and the yellow LED Link light (single channel base station) or series of Link lights (multi-channel base station).



- 2 On the headsets, locate the red and green LED indicator lights on one dome, and the volume control/power knob and push-to-talk (PTT) button on the other dome.



- 3 To begin, make sure that all the headsets are turned off and the base station is connected to a live power source. Depress the black Pairing button on the front of the base station and hold it until the Link light(s) begin to flash. Flashing Link lights indicate the base station is "searching" for one or more previously linked headsets.

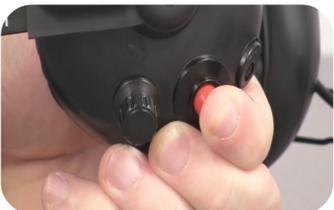

- 4 Take the first headset you wish to pair and then depress and hold the push-to-talk button on the dome. Keeping the button firmly depressed, turn the headset on by twisting the volume control in a clockwise direction. The green light will flash initially when the unit is turned on, and then switch to flashing red and green lights. When this occurs, release the push-to-talk button.



- 5 Within a few seconds, the red and green lights will stop flashing and you will see a solid green light on the headset and a solid yellow Link light the base station, indicating the headset has been properly linked. If you are linking only one headset, you may stop at this step and turn everything off. Otherwise, **leave everything turned on** and proceed to the next step.






**6** Up to four headsets can be linked to a multi-channel base station. If you wish to link more than one headset, **make sure to leave the first headset turned on after it has been linked.** Turning off a linked headset before all linking is complete will cause that headset to become unlinked. If that happens, turn everything off and start the procedure from the beginning.



**7** To link the next headset, press and hold the Pairing button on the front of the base station until the remaining link lights begin to flash.

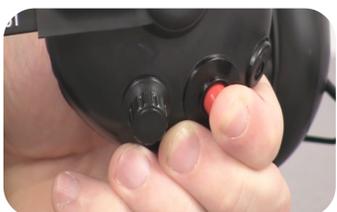

**8** Grasp the second headset you wish to pair and then depress and hold the push-to-talk button on the dome. Keeping the button firmly depressed, turn the headset on by twisting the volume control in a clockwise direction. The green light will flash initially when the unit is turned on, and then switch to flashing red and green lights. When this occurs, release the push-to-talk button.



**9** Within a few seconds, the red and green lights will stop flashing and you will see a solid green light on the headset and a solid yellow Link light the base station, indicating the headset has been properly linked.



**10** Continue repeating this procedure for each headset you wish to link, remembering to keep each headset turned on after it has been linked. After you have completed linking all of the headsets, the equipment can be safely turned off.



[www.facebook.com/firecom.facebk](http://www.facebook.com/firecom.facebk)



[www.linkedin.com/company/firecom](http://www.linkedin.com/company/firecom)



[www.twitter.com/firecomheadsets](http://www.twitter.com/firecomheadsets)



[www.youtube.com/firecomheadsets](http://www.youtube.com/firecomheadsets)



7340 SW Durham Rd • Portland, OR 97224 USA • 800-527-0555 • [www.firecom.com](http://www.firecom.com)

All Information and images used in this circular and the referenced video ©2012 by Sonetics Corporation.